

LINX-11x Automation Server, CEA-709

Installation instructions

Instructions de montage






Montageanweisung



Montagevoorschrift


Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

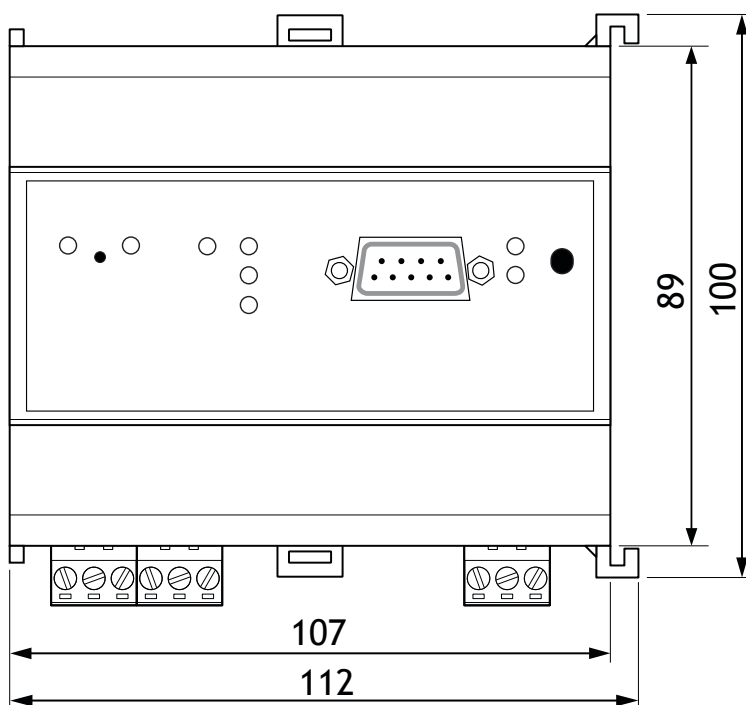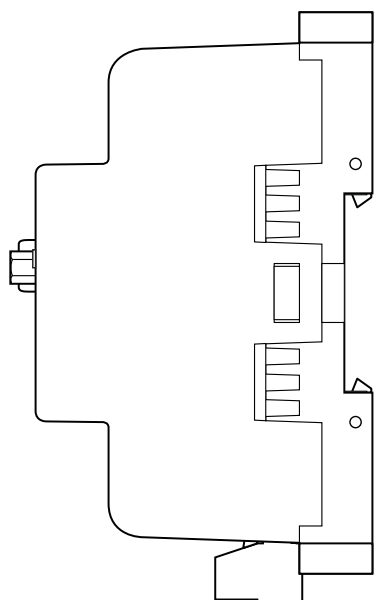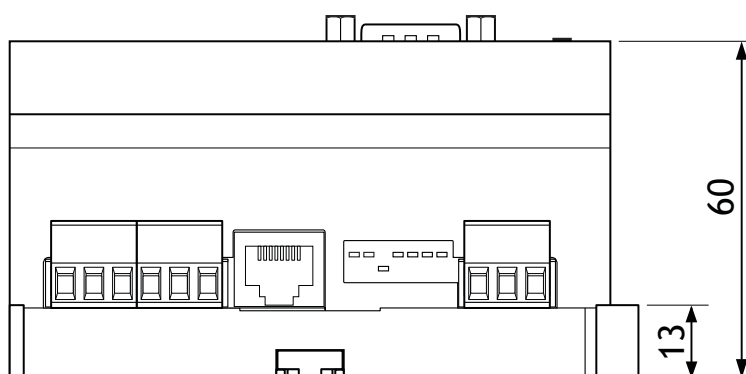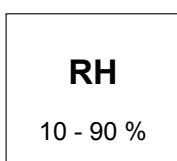
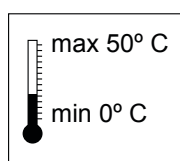


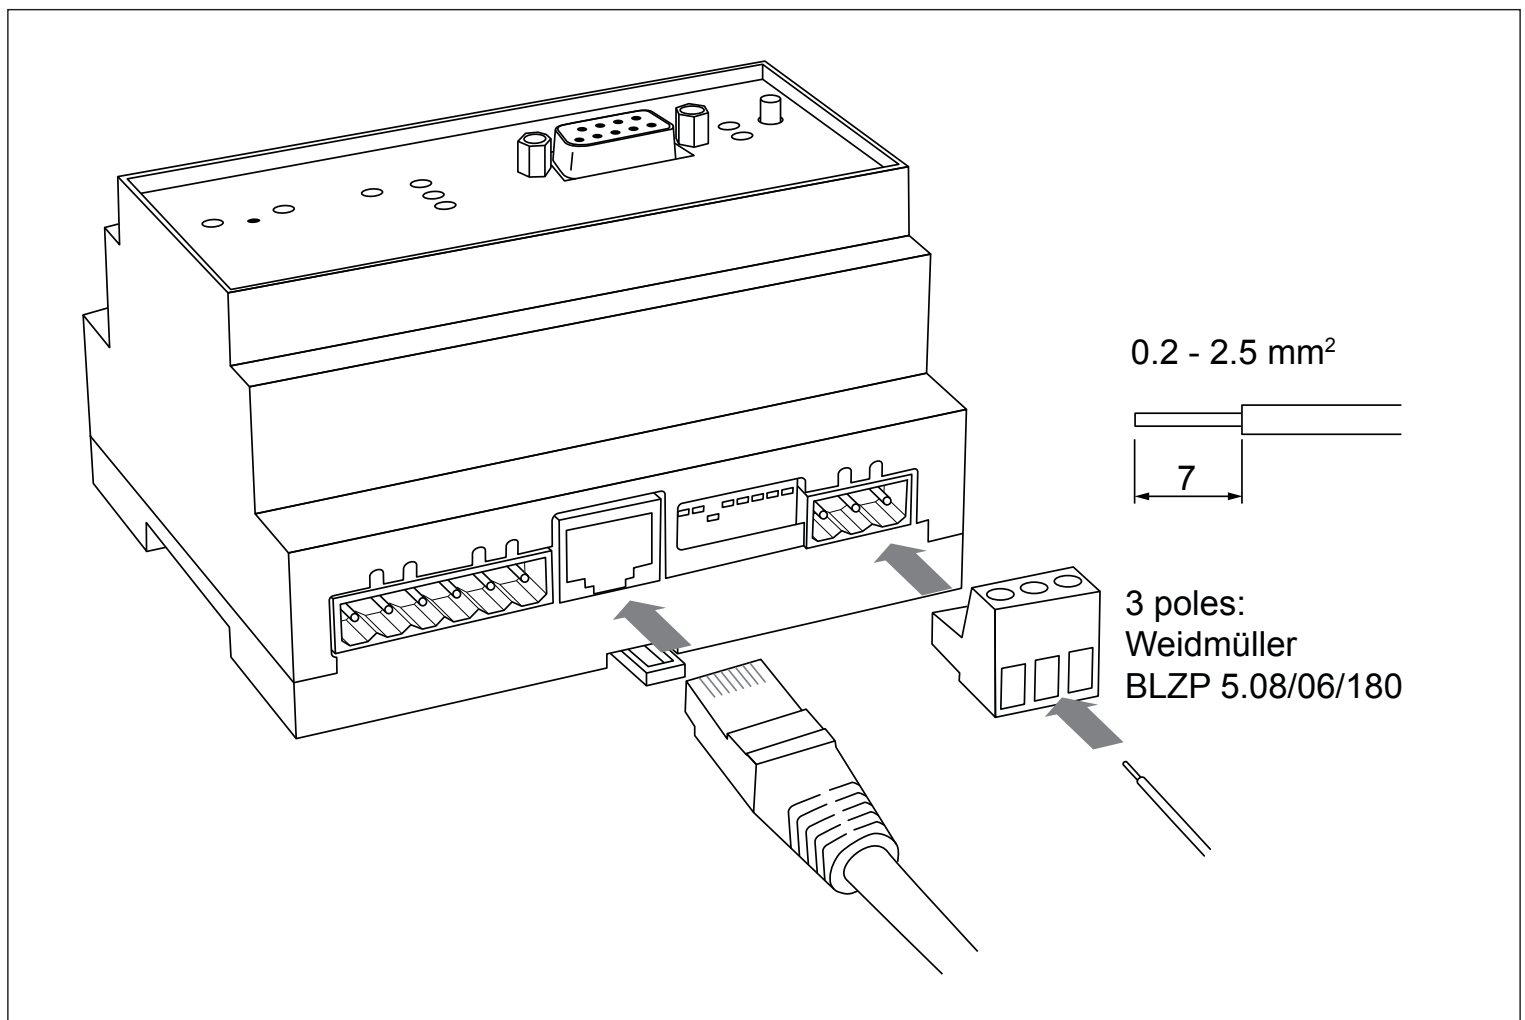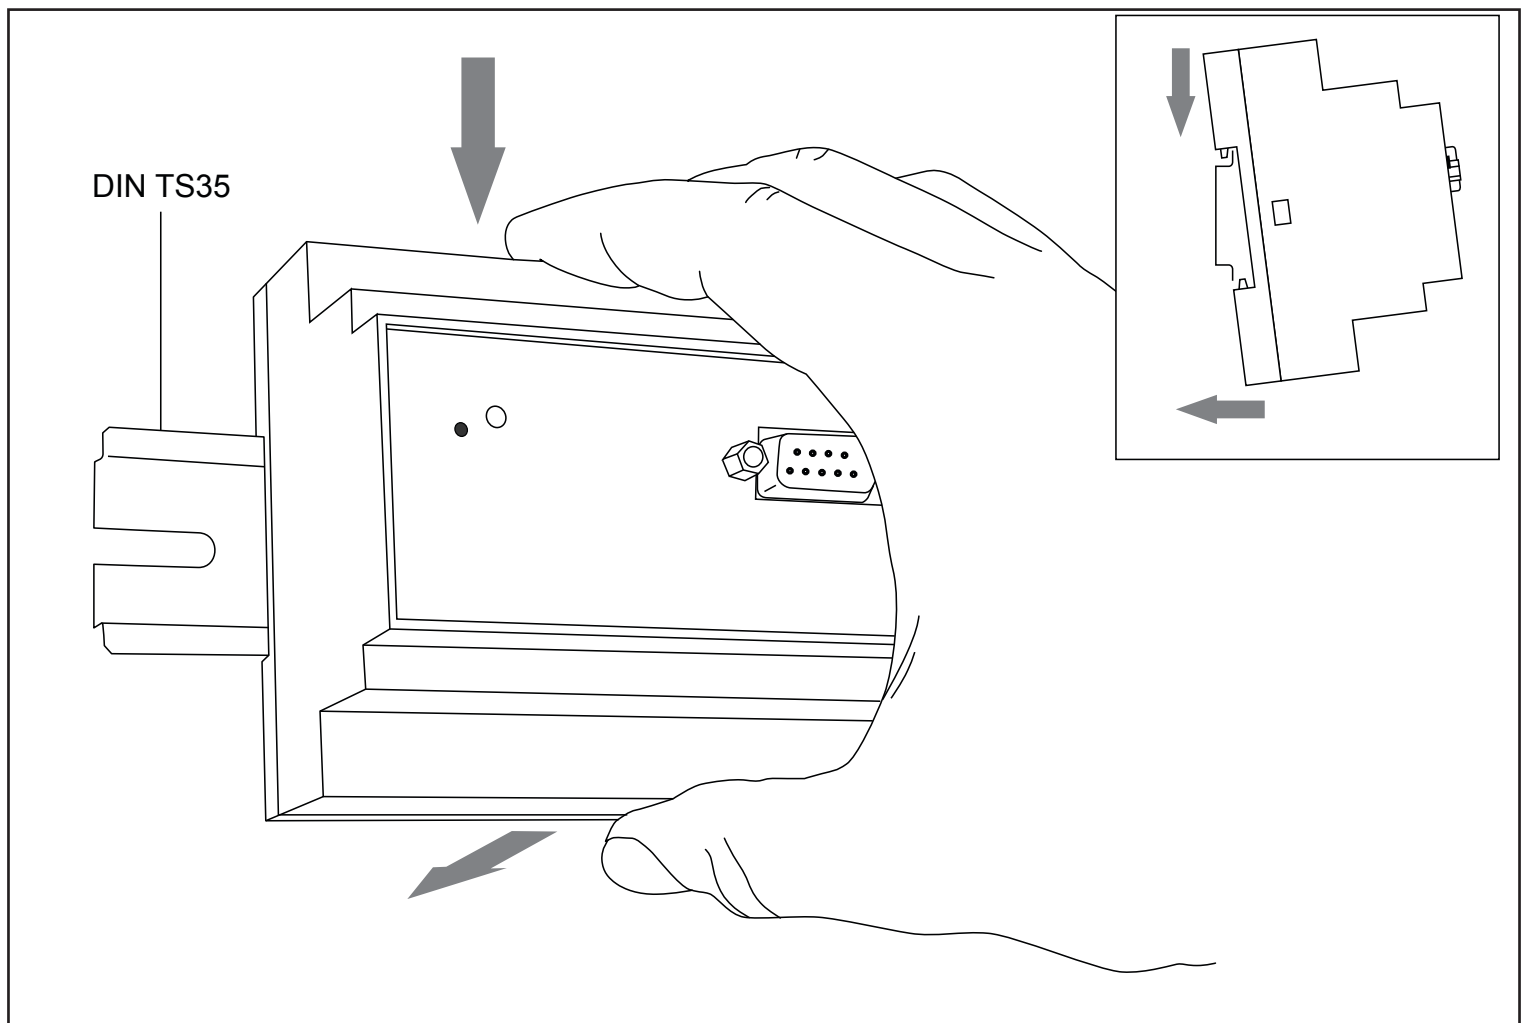

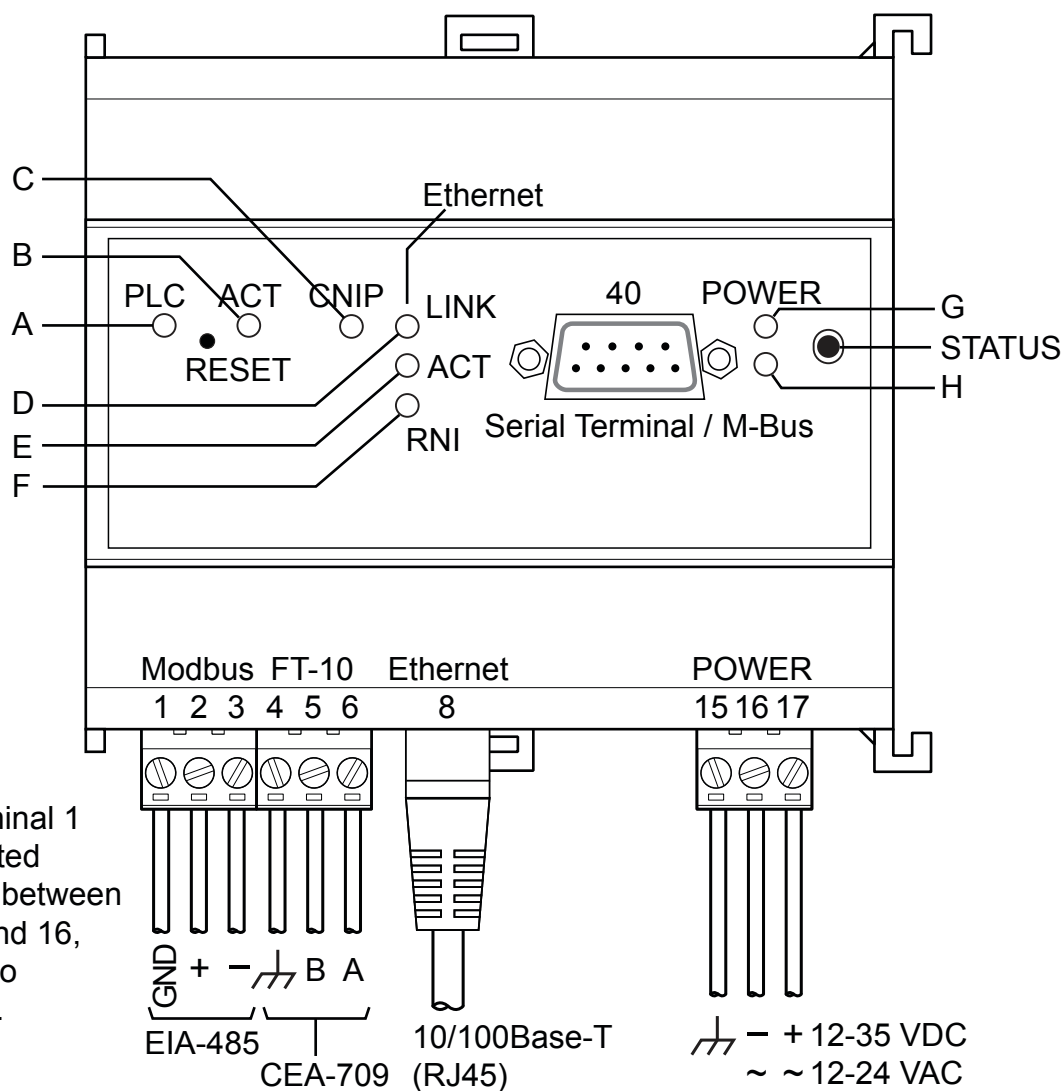

Connectors			Status LEDs		
Modbus EIA-485	1	Input GND	A	OFF	PLC not running
	2	Input + (B) non-inverting input		Green flashing	PLC program running
	3	Input – (A) inverting input		Green	PLC program not running
CEA-709 TP/FT-10	4	Input EARTH GND		Orange	I/O disabled
	5	Input B		Red	CPU overload
	6	Input A	B	Green flashing fast	Traffic on CEA-709 port
Ethernet	8	10/100Base-T (RJ45)		Green flashing 1 Hz	Not commissioned
				Red permanent	CEA-709 port damaged
POWER	15	Power supply input EARTH GND		Red falshing fast	CEA-709 traffic overload
	16	Power supply input MINUS	C	Green	IP port is fully functional
	17	Power supply input PLUS Can be connected to EARTH GND  Must NOT be connect to EARTH GND		Yellow	IP port functional but config. is not up-to-date
SERIAL	40	EIA-232 (DB9 male)		Red flashing at 1Hz	IP port is non-functional
		Terminal or M-Bus depending on DIP switch No. 7		OFF	IP port not commissioned
					IP port is not active
Buttons			D	Green	Ethernet link
RESET	Reset		E	Green flashing	Ethernet traffic
STATUS	Send service pin message		F	Green	RNI connected
			G	Green	Power
			H	OFF	Normal operation

Serial Port

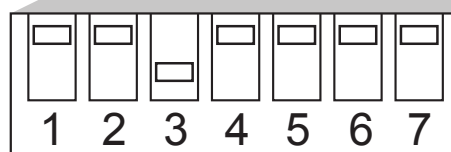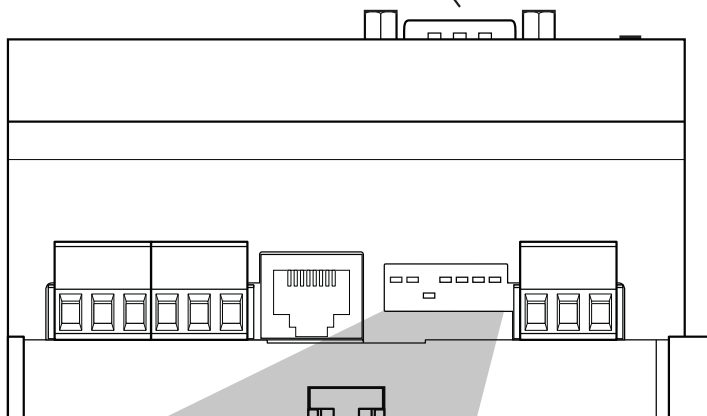

OFF
ON

1	2	3	4	5	6
OFF	OFF	ON	OFF	OFF	OFF

Factory default, do not change!

7	Serial Port
OFF	Terminal Mode
ON	M-Bus Mode

Node ID of CEA-709 Port 1

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

