Electronic Intelligent Controls, S.L. Passatge Garrotxa, 6

Barcelona, Spain

08830 Sant Boi de Llobregat

Tel.: +34 93 652 55 21 Fax: +34 93 652 55 22 www.e-controls.es info@e-controls.es

Instructions sheet



50212010

Power supply



AirQualy CO2 + PM

CO2 and PM sensor for building interiors

AirQualv is an indoor air quality sensor that is available in different models, which include a sensor or a combination of sensors between Temperature, Humidity, CO2, Volatile Organic Compounds (VOC) and Particulate Matters (PM). The equipment carries out continuous measurement of the sensor or sensors and displays its value through LED indicators or sends the value through its outputs or the communication bus

For its operation, the equipment requires a coupling unit called "e-Bus Coupling Surface" that must be purchased separately and which is available in 3 models; a stand-alone model, a model with a 0-10V / 4-20 mA output + a relay output and a model with Modbus communication.

The device is configured wirelessly via NFC with the EConfigurator APP, available for Android in the Google Play Store.

Through the ETools APP it is possible to visualize the value measured by each sensor of the equipment in a numerical way on the mobile phone.

Product description

The AirOugly CO2 + PM model includes 2 different sensors to measure CO2 with optical NDIR technology and Particulate Matters (PM) to measure particles of size 1 micron, 2.5 microns, 4

APP download links, microns and 10 microns. The equipment is available in two finishes: a model with 2 columns of LED indicators to signal the measurement of each sensor. The CO2 and PM measurements are displayed in two columns with 5 LED indicators each. There is a second model without LED

We recommend installing a sensor every 30 m2.

LED indicators to display the measured value

The measurements of the CO2 and PM sensors are represented by 5 blue, green, yellow, orange and red LED indicators, which show the measured levels from best to worst air quality. Each LED is associated with a range of values and lights up when the measured value is within its range.

Through the E-Configurator APP (see configuration section) it is possible to modify the range of values associated with each LED indicator and sensor to adapt them to the needs of each installation.

Viewing values through mobile phone

The measured value of each sensor can be viewed with a mobile phone via the NFC interface. To do this, you must download the ETools APP from the Play Store and install it on a mobile phone with an Android operating system.

Customisation of the front tailored to each project

The product includes a removable label that comes pre-designed with explanatory icons. Through the e-Touch Creator website at www.e-controls.es, it is possible to define the custom label, being able to choose an icon or text for each LED indicator, as well as the desired colour.

Once the design is finished, a form must be filled in and sent to E-Controls for printing, or the designed image can be downloaded for printing on a conventional printer.

Equipment setup

The equipment is configured through a mobile phone using the E-Controls EConfigurator APP and NFC proximity wireless data transfer technology. To do this, you must download the APP from the Play Store and install it on a mobile phone with Android operating system and download the project by placing the phone on top of the front until the device's antenna is detected. Once the phone has detected the equipment, download the project by pressing the data transfer icon in the APP. For more information, please refer to the operating manual of the EConfigurator APP.

In the model with Modbus coupling unit it is also possible configure the device via bus.

The configuration manual details all the parameters available on the equipment.

The device configuration can be done without powering the equipment, and even without removing it from the packaging box, thus greatly facilitating the configuration work.



EConfigurator





Installing the product

IMPORTANT NOTE: Install the equipment at a height equal to or greater than 150 cm from the ground. The equipment can react more quickly depending on the speed of the air around the sensor. Avoid installing the equipment near an air outlet with a concentration of CO2 and dust. For a correct CO2 measurement, we recommend installing a sensor every 30 m2.

Product assembly process

- Run the ETools APP and bring the phone closer to the equipment to view the values of each 1. Fix the e-Bus Coupling Surface rack to the wall. If the equipment requires external or bus power supply, connect the cables to the corresponding terminals (see e-Bus Coupling Surface Instruction Sheet).
 - 2. Fix the frame to the rack by the teeth on the upper part and press lightly on the lower par until you hear a "click".
 - 3. Insert the label in the upper slot on the front of the equipment, between the methacrylat and the circuit
 - 4. Attach the front centred on the frame.
 - 5. Power the equipment and wait 5 minutes to obtain a correct measurement.

Product disassembly

- 1. Insert a small screwdriver into the window located at the bottom of the frame. Slightly pry out with the screwdriver and remove the frame from the bottom.
- 2. Slightly move the frame upwards and completely remove the front and frame.

Precautions:

- Disconnect the device from the supply voltage before mounting or moving the equipment.
- Do not leave bare or wrapped cables around the equipment. Do not connect the device with wet hands
- Do not open or pierce the product.
- Keep the device and cables away from moisture and dust.
- Use the equipment in pollution-free environments and in atmospheric pressure environments within the permitted levels.
- Avoid sudden blows on the equipment.
- Keep the ventilation windows of the equipment clean using a cloth or with pressurized air.
- Power the equipment with the recommended power supply and always with a very low voltage isolated power supply.

Installing the product Product assembly process:

Fix frame to coupling unit Fix frame to wall





Insert label



Attach front to frame



Product disassembly:



Technical specifications

	rower suppry
	Operating voltage
	Maximum consumption
	Sensor CO2
_	Technology NDIR (Non-dispersive infrared technology)
	Measurement range
	Resolution
	Accuracy
	Stability with temperature
	Loss of precision throughout its life +/- 50 ppm
	Sampling time. 2 seconds
	Stable measurement value
	Working pressure range 700 to 1200 mBar
	Maintenance. Not required (factory calibrated)
	Shelf life. 15 years
	Particulate Matter sensor (PM)
-	Measurement range
	Resolution
	Precision for PM1 and PM2.5
ne	
ne	±10 % @ 100 to 1000 μg/m3 Precision for PM4 and PM10
	±25 ⁻ ½ @ 100 to 1000 μg/m3 Lowest limit detection
	Shelf life
	Acoustic emmision levels
us	Certification
	LED indicators
ce	Quantity
	Range configuration
rt	CO2 sensor indicators
	Colours
	Ranges Blue / Green / Yellow / Orange / Red 0 - 350 / 351-500 /501-800 / 801-1200 / >1200 ppm
te	PM sensor indicators
	Colours
	Ranges Blue / Green / Yellow / Orange / Red 0 - 6,0 / 6,1-12,0 / 12,1-35,0 / 35,1-60,0 / >60 ug/m ³
	Front design

Wireless communication	
Functionality For configuration and reading of values	
Technology	
Standard ISO/EIC 15693	
Reading Speed	
Data security	
Mechanical characteristics	
Dimensions (with frame)	
Installation type	
Weight	
Front type	
Colour	
Environmental protection level (assembled) IP20	
Temperature 10.05	
Operation	
Storage10 °C to +85 °C (14 °F to +185 °F)	
Humidity (non-condensing)	
Operation	
Storage	
Product family standards	
Automatic electrical control devices for household and similar use	
CE conformity	
Mark	
Security	
Standard	
IEC Protection	
EMC	
Emissions EN 61000-6-3	
Immunity	

Ordering numbers

AirQualy CO2+PM, Indoor CO2 + PM Sensor, white finish

Custom design through e-Touch Creator website

AirQualy CO2+PM Leds, Indoor CO2 + PM Sensor with LED indicators, white finish

AQ.002400-000 AO.012400-000

Related items

2	e-Bus Coupling Surface SA, Stand-alone coupling unit for AirQualy mounting. 12-24 Vdc power supply with external jack connector
	e-Bus Coupling Surface 20, Coupling unit with relay output + 0-10V/4-20 mA analogue output for AirQualy mounting. 12-24Vdc power supply
	e-Bus Coupling Surface Modbus, Coupling unit with Modbus RTU communication for AirQualy mounting. 12-24 Vdc power supply

The packaging of this product is considered an industrial container, with the recipient being a

The manufacturer is not responsible for the incorrect use or installation of the product Read this document before installing the product. Document subject to changes without prior notice.

