

LIOB-585 I/O Controller

Installation instructions

Instructions de montage


Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

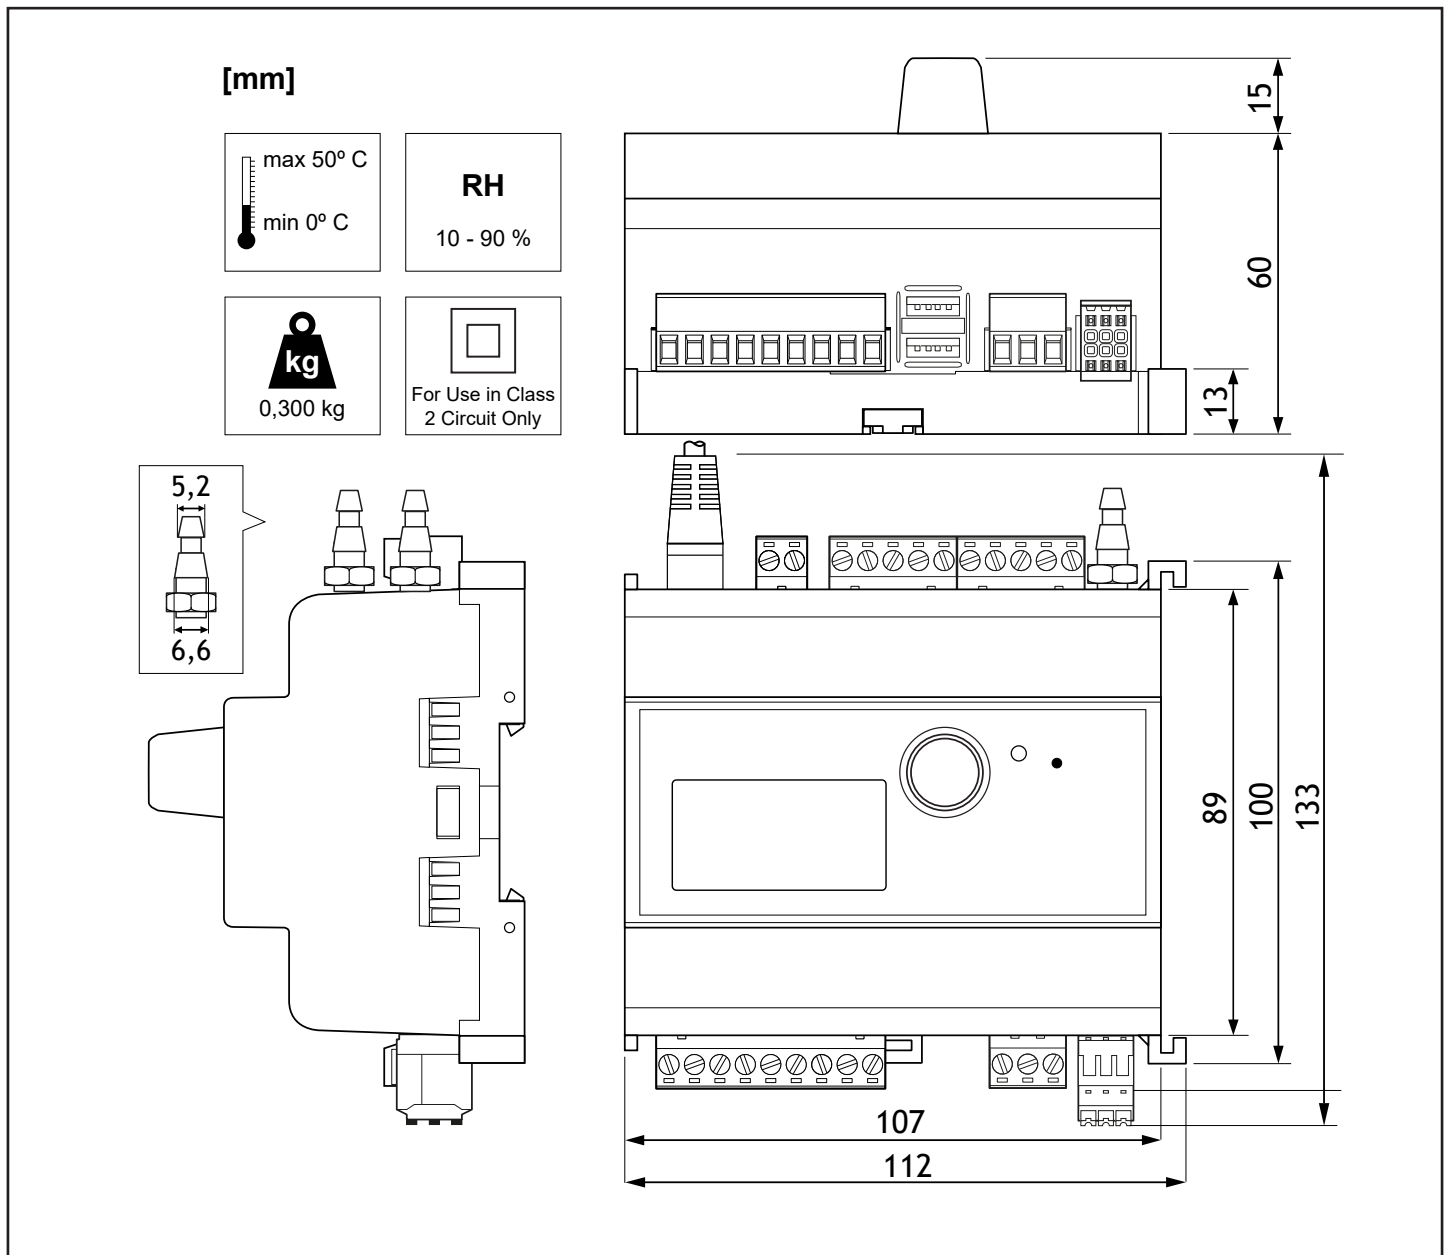

DHCP enabled
User: admin

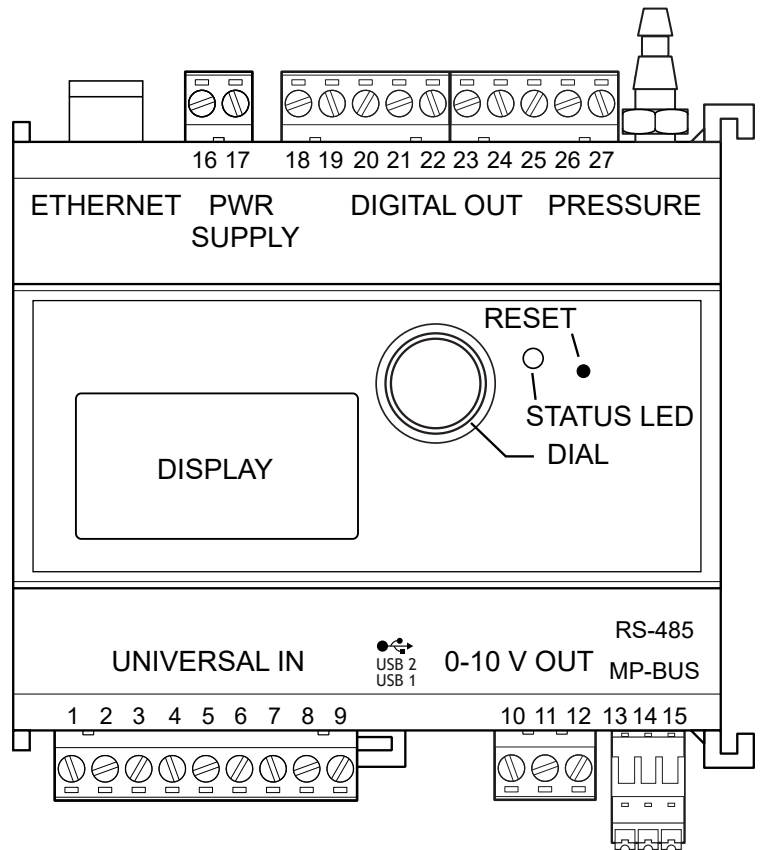
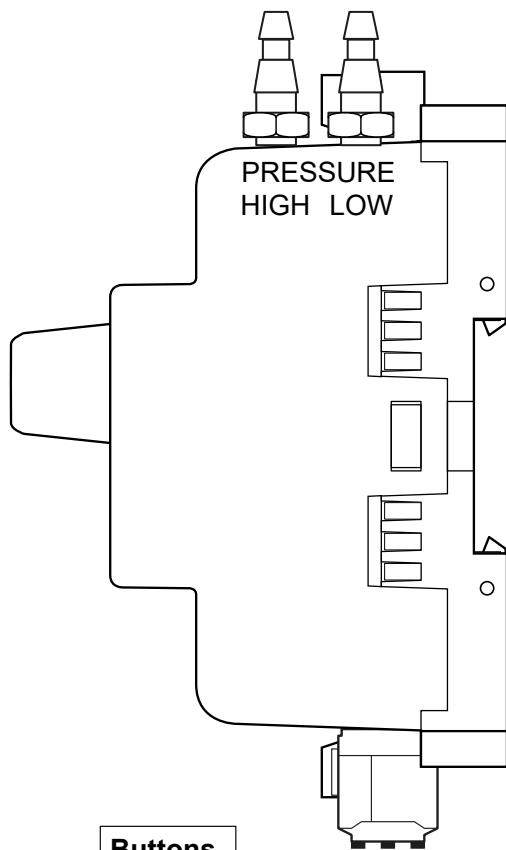


Buttons

RESET DIAL	Reset Button Turn-and-Push Dial
------------	------------------------------------

Connectors

UNIVERSAL INPUT	1	Input UI1
	2	Input GND
	3	Input UI2
	4	Input UI3
	5	Input GND
	6	Input UI4
	7	Input UI5
	8	Input GND
	9	Input UI6
ANALOG OUTPUT 0-10 V	10	Output AO1
	11	Output GND
	12	Output AO2
RS-485 top row	13	GND
	14	+
	15	-
MP-BUS bottom row	13	⊥
	14	MP
	15	+

 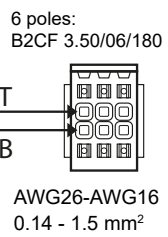

- 2 poles: Weidmüller BLZP 5.08/02/180
- 3 poles: Weidmüller BLZP 5.08/03/180
- 5 poles: Weidmüller BLZP 5.08/05/180
- 9 poles: Weidmüller BLZP 5.08/09/180

Connectors



POWER SUPPLY	16	Input 24 V PLUS or AC
	17	Input 24 V MINUS or AC Do NOT ground ⚠ Input 16 (+24 V)
DIGITAL OUTPUT TRIAC 0.5A 24-240 VAC 50 / 60 Hz	18	Output DO1
	19	Output COM
	20	Output DO2
	21	Output COM
DIGITAL OUTPUT TRIAC 0.5A 24-240 VAC 50 / 60 Hz	22	Output DO3
	23	Output COM
	24	Output DO4
	25	Output COM
	26	Output DO5
PRESSURE	13	Pressure Input LOW
	14	Pressure Input HIGH

LI0B-585

Status LED	
OFF	Unconfigured
GREEN	In Operation
ORANGE	In Manual / Override Mode
RED	Error
FLASHING	Traffic

Please update the firmware of the device first, see www.loytec.com

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

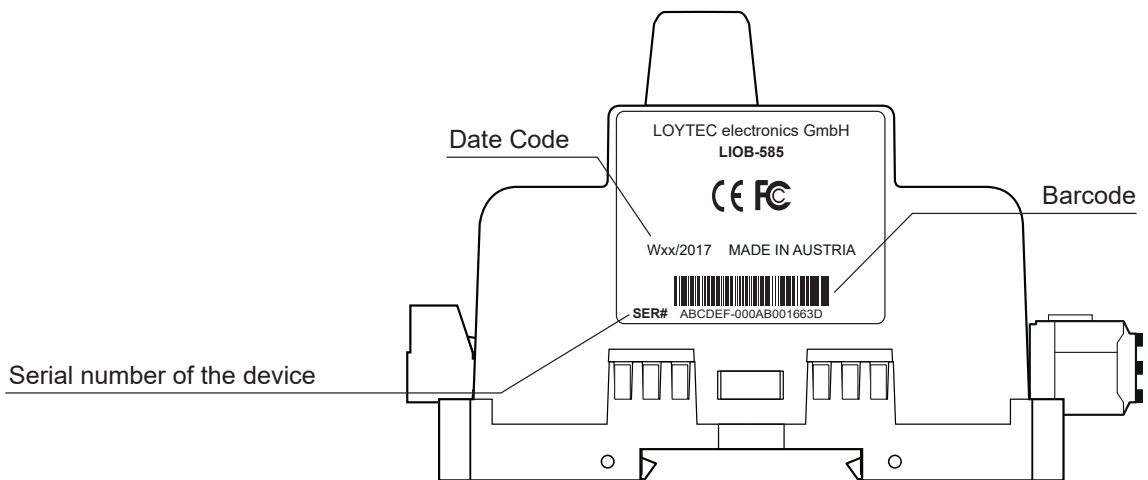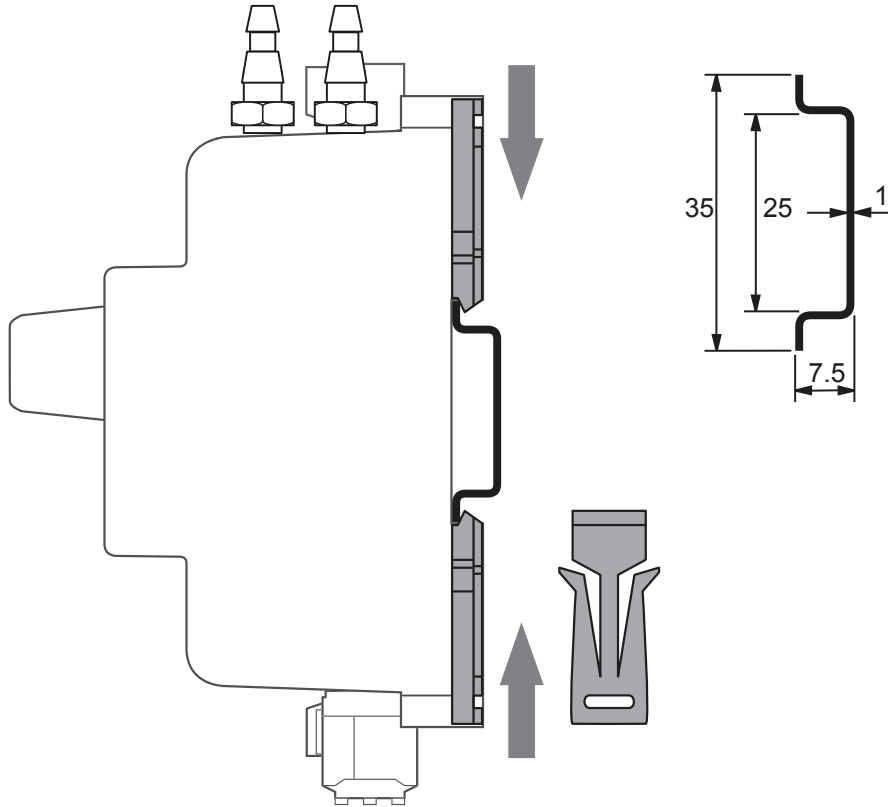

label 1.1