

Electronic Intelligent Controls, S.L. Passatge Garrotxa, 6 08830 Sant Boi de Llobregat Barcelona, Spain Tel.: +34 93 652 55 21 Fax: +34 93 652 55 22 www.e-controls.es info@e-controls.es


# **Instruction sheet**



## e-Room Modular PRO Modbus

Fan-coil 3 Speed controller with Modbus communication and 0-10V valve control, for DIN rail installation

Orderina numbers: RM.574603-011 (Modbus RTU), RM.554603-011 (Modbus TCP)

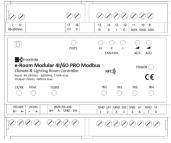

Valve Outputs: 0-10V Fan-Coil Output: 3 Speed

e-Room Modular PRO is a DIN rail controller designed for 3 fan-coil speed and 0-10V valve outputs control. The device includes a Modbus communication port, allowing integration and remote control from a BMS.

It features preprogrammed operating modes for 2-pipe or 4-pipe installations, as well as an additional output for lighting control linked to the selected programming logic. Its wide range of configurable parameters makes it easy to adapt the device to the requirements of each project.

- The 4 digital/analog inputs enable the implementation of energy efficiency functions in the conditioned area:
- · Occupancy input via card reader contact.
- · Window contact input, which stops the HVAC system when the window is opened.
- Combined motion detector and door contact inputs for automatic occupancy detection in hotel rooms.

The device can be configured using the E-Configurator app via the NFC interface, either with the unit powered or unpowered, or through Modbus registers. In installations with a display, configuration can be performed through the display's NFC interface, which automatically transfers the settings to the controller. In installations without a display, the NFC configuration is loaded directly onto the controller, and a temperature sensor must be connected to the IN4 input to perform temperature control or send the value via Modbus. In both cases, all parameters—both of the display and the controller itself—can be modified through the e-Room's Modbus port.

### Configurations by Installation Type

This table summarizes the preprogrammed operating modes and the function of each of the device's inputs and outputs for each mode.

Refer to the device "Configuration Manual" for a description of the configurable parameters and the procedure to modify the defined parameter values.

IN1, IN2: Digital Inputs. IN3, IN4: Digital/Analog Inputs (NTC10K) FC I, FCII, FCIII, OUT1: Relay Outputs. AO2, AO3: 0-10V Outputs

		Inputs Terminals				
Installation Type	Number of pipes	IN1 (1-2)	IN2 (3-4)	IN3 (5-6)	IN4 (7-8)	
Option 1	2	Keycard contact	Window	Lighting Pushbutton	Analog In 1	
Option 2	2	Keycard contact	Window	Analog In 1	Analog In 2	
Option 3	4	Keycard contact	Window	Analog In 1	Analog In 2	
Option 4	2	Sensor movimiento	Window	Door Contact	Door Contact Lighting Pushbutton	
Option 5	2	Sensor movimiento	Door Contact Analog In 1		Analog In 1	
Option 6	4	Sensor movimiento	Window	Door Contact	Analog In 1	

			Output Terminals						
	Installation Type	Number of pipes	OUT 1 (17-16)	FC III (15-12)	FC II (14-12)	FC I (13-12)	AO 3 (11-10)	AO 2 (10-9)	
	Option 1	2	Aux Lighting	YES	YES	YES	HEAT/COOL EV	Analog AUX	
	Option 2	2	Aux Lighting	YES	YES	YES	HEAT/COOL EV	Analog AUX	
	Option 3	4	Aux Lighting	YES	YES	YES	COOLEV	HEAT EV	
	Option 4	2	Aux Lighting	YES	YES	YES	HEAT/COOL EV	Analog AUX	
	Option 5	2	Aux Lighting	YES	YES	YES	HEAT/COOL EV	Analog AUX	
	Option 6	4	Aux Lighting	YES	YES	YES	COOLEV	HEAT EV	

### Installation instructions

The device is designed for mounting in cabinets with a standard DIN EN 50 022. It should not be installed on shelves, behind curtains, near or above heat sources, or exposed to direct sunlight.

#### Important:

- Install the device in the electrical panel, keeping the very low voltage signal wiring (inputs) separate from the low voltage wiring (outputs).
- Use shielded cable for the communication channel with the BMS.
- · Always follow the type of wiring indicated in the installation diagram.

#### Caution:

- Before installing, uninstalling, or cleaning the device, ensure that there is no voltage in the mains cables
  or near the device.
- Do not cut, splice, or coil the mains cables connected to the device.
- · Do not handle connections with wet hands.
- · Do not open, drill, or modify the product.
- · Keep the device and cables away from moisture and dust.
- · Clean only with a slightly damp cloth using water.


### Installation steps:

- 1. Disconnect the power supply to the electrical panel.
- Insert the device onto the DIN rail, placing the black latch at the bottom; pull the latch down, press the device until it snaps into place, and release the latch to secure it.
- 3. Verify that the panel wiring follows the construction mounting diagram.
- 4. Connect the cables to the terminals according to the diagram and attach them to the device.
- 5. Restore the power and check the operation.
- Close the electrical panel.

#### Installation drawing

NS111

Install electrical protections and required cabling according to the standards of every country.

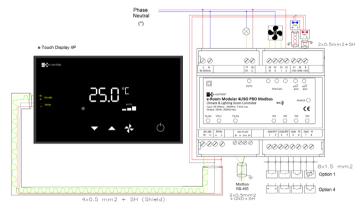

NOTE: Use shielded twisted pair cable on inputs I3 and I4 when configured as analog inputs.

(\*) This diagram defines a functional installation layout of the product. It is the installer's responsibility to properly protect the installation and the equipment it comprises in accordance with the regulations of each country.

### Device start-up

When power is applied to the controller, the device takes 5 seconds to initialize. During this time, the POWER LED indicator blinks red and then changes to steady green once initialization is complete.

### BMS Communication

The device provides a Modbus register map with all the registers required to configure, monitor, and control the unit. The Modbus map is divided into three sections: device configuration registers, input registers, and output registers. Through these registers, both the display and the device can be configured.

#### Technical features

Power Supply	100 240 1/45 (100/ 50 - 50)
Operating Voltage	
BMS Communication (BMS RS-485 connector) - MODBUS	
	A-, B+, GN
	Modbus Rī
	8E1, 8O1, 8N1, 8I
BMS Communication (ETHERNET connector) - MODBUS	rCP model
Interface	Ethernet IEEE 80
	RJ
Communication speed	
	5
Display Interface (RS-485 e-Room Bus connector)	
	+24 Vdc ± 5
	Overcurrent protecti
NFC Wireless interface	
	ISO/IEC 156
Digital Inputs (IN1, IN2)	
Input impedance	>25 I
Analog Inputs (IN3, IN4)	
	Interchangeable NTC, 1%, 10 K $\Omega$ to 25°C (77
	>681
Relay Outputs for Fan-Coil Speeds (FC I, FCII, FCIII) and L	
	Potential-free rel 250 V AC / 30 V I
Protected against overvoltage and overcurrent (short-circu	
Analog Outputs 0-10V for valve outputs (AO2, AO3)	
Maximum current	
Accuracy	
Protected against overvoltage and overcurrent (short-circu	uit)
Front LED Indicator (POWER)	
	LED
Operating Conditions	0.5
	20°C to +85°C (-4°F to +185
Humidity (non condensing)	
Mechanical Characterístics	95% KH at 50
	RAL 70
Protection degree	
Product family standards	
	nilar use EN 60730-1:20
Complance Directives	
CE Marking	
CE Marking Security	
CE Marking Security	EN 60730-1:20
CE Marking Security Standard	
CE Marking Security Standard EMC Emissions	EN 60730-1:20  EN 61000- EN 61000- EN 61000-

## Ordering numbers

e-Room Modular PRO Modbus, 0-10V valve, 3 Fan-coil speeds controller Modbus RTU (RS-485) ....RM.574603-011

e-Room Modular PRO IP, 0-10V valve, 3 Fan-coil speeds controller Modbus TCP (Ethernet/IP) ......RM.554603-011

The package of this product is considered as industrial packaging intended for professional use only. The manufacturer is not responsible of the incorrect installation or use of the product. Specifications are subject to change without notice.

