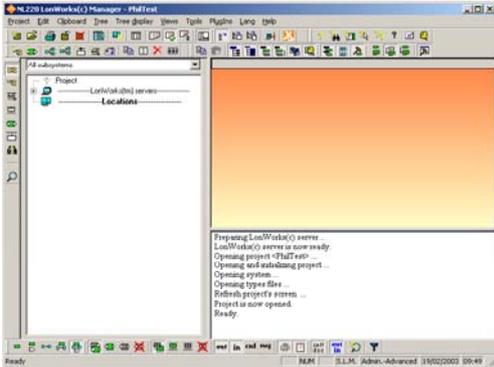
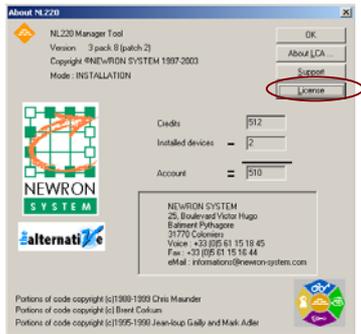
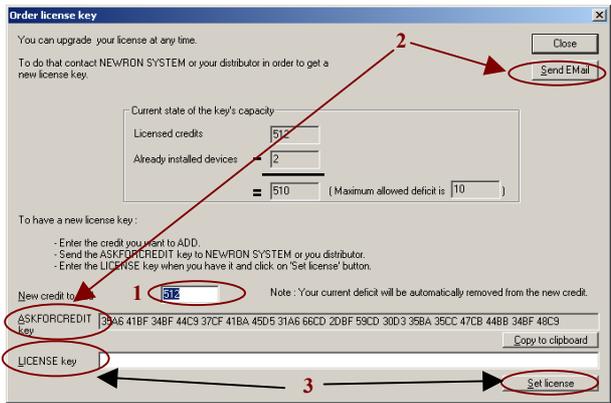


CREDIT NL220 TOOL

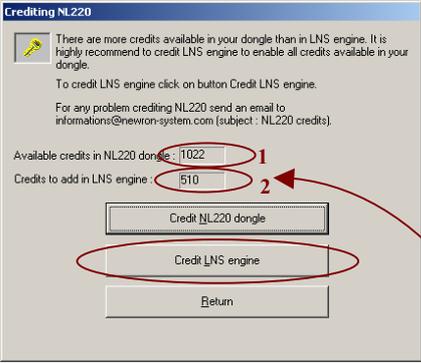
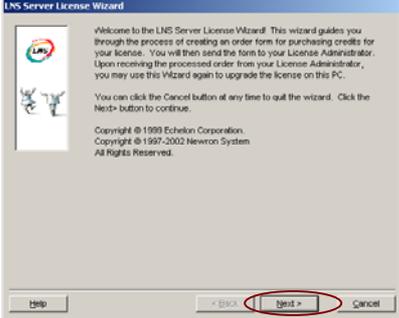
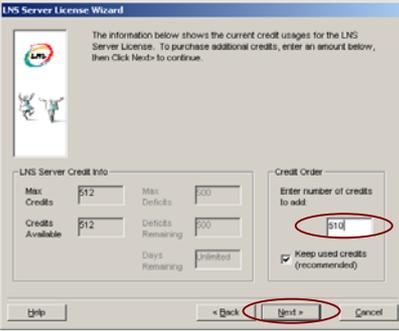
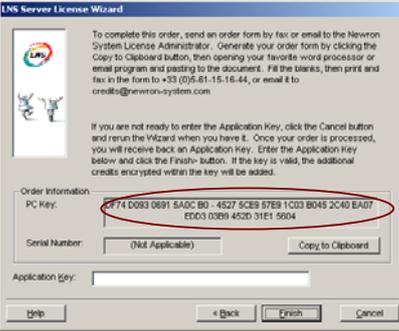
BEWARE:
LNS credits are linked to a single machine so:
PLEASE BE SURE FIRST THAT YOU INSTALL EVERYTHING ON THE PC
THAT WILL COMMISSION DEVICES.

Phase 1: credit NL220 dongle.

<p>Step 1: Start NL220 and open a project:</p>	
<p>Step 2: Choose "Help Menu", "About NL220": Choose the "License" button</p>	
<p>Step 3: 1. In field "New Credit to Add" Type your credits to add: e.g. 512</p> <p>2. Send us the "ASKFORCREDIT KEY" by email</p> <p>We send you back the LICENCE KEY</p> <p>3. Once you filled the field LICENCE KEY and press "Set Licence" then key is credited</p>	
<p>Step 4: Check that NL220 key is now credited</p>	

**IMPORTANT:
Second phase is not mandatory:
you may have enough LNS credits in LNS server**

Phase 2: credit LNS Engine.

<p>Step 1: If this windows appears this means you do not have enough LNS credits</p> <ol style="list-style-type: none"> 1. it shows credits available in NL220 2. it says how many credits you need at least to add in LNS server <p>Press on “Credit LNS Engine”</p>	
<p>Step 2: You enter the LNS licence wizard.</p> <p>Click on “Next”</p>	
<p>Step 3: It displays the LNS credits available</p> <p>You need to fill the field “Enter number of credits to add” with the number provided by NL220</p> <p>Then click “Next”</p>	
<p>Step 4: You send us the PC key by email or fax. Use “copy to clipboard function” and paste.</p> <p>We will return you the “Application Key”.</p>	
<p>Step 5: Fill the field “Application Key” with the key we return you. Click on finish</p> <p>BEWARE: if you stopped the application in the meanwhile be sure to redo <u>exactly</u> step 1 to 4 before entering the Application key. Provide the exact same number of credits in “credits to ask”</p>	