

LINX-21x Automation Server, BACnet

Installation instructions

Instructions de montage







Montageanweisung



Montagevoorschrift


Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

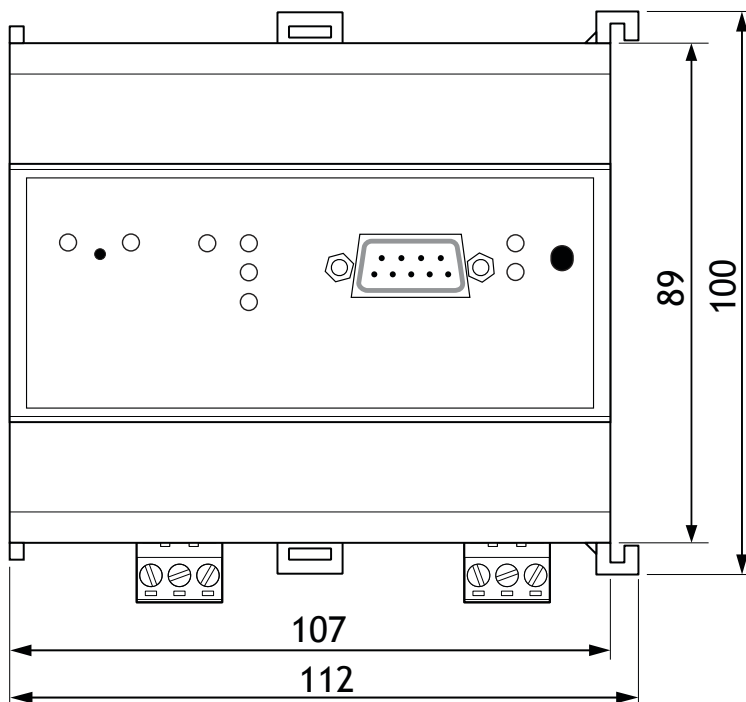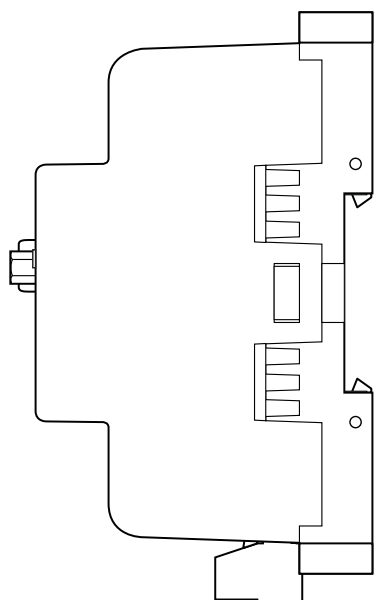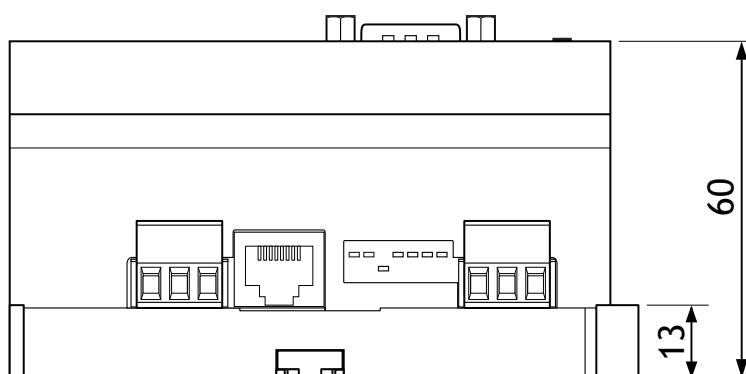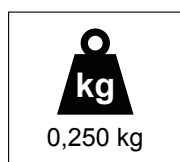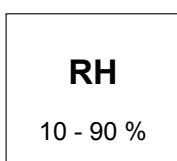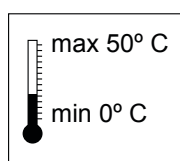

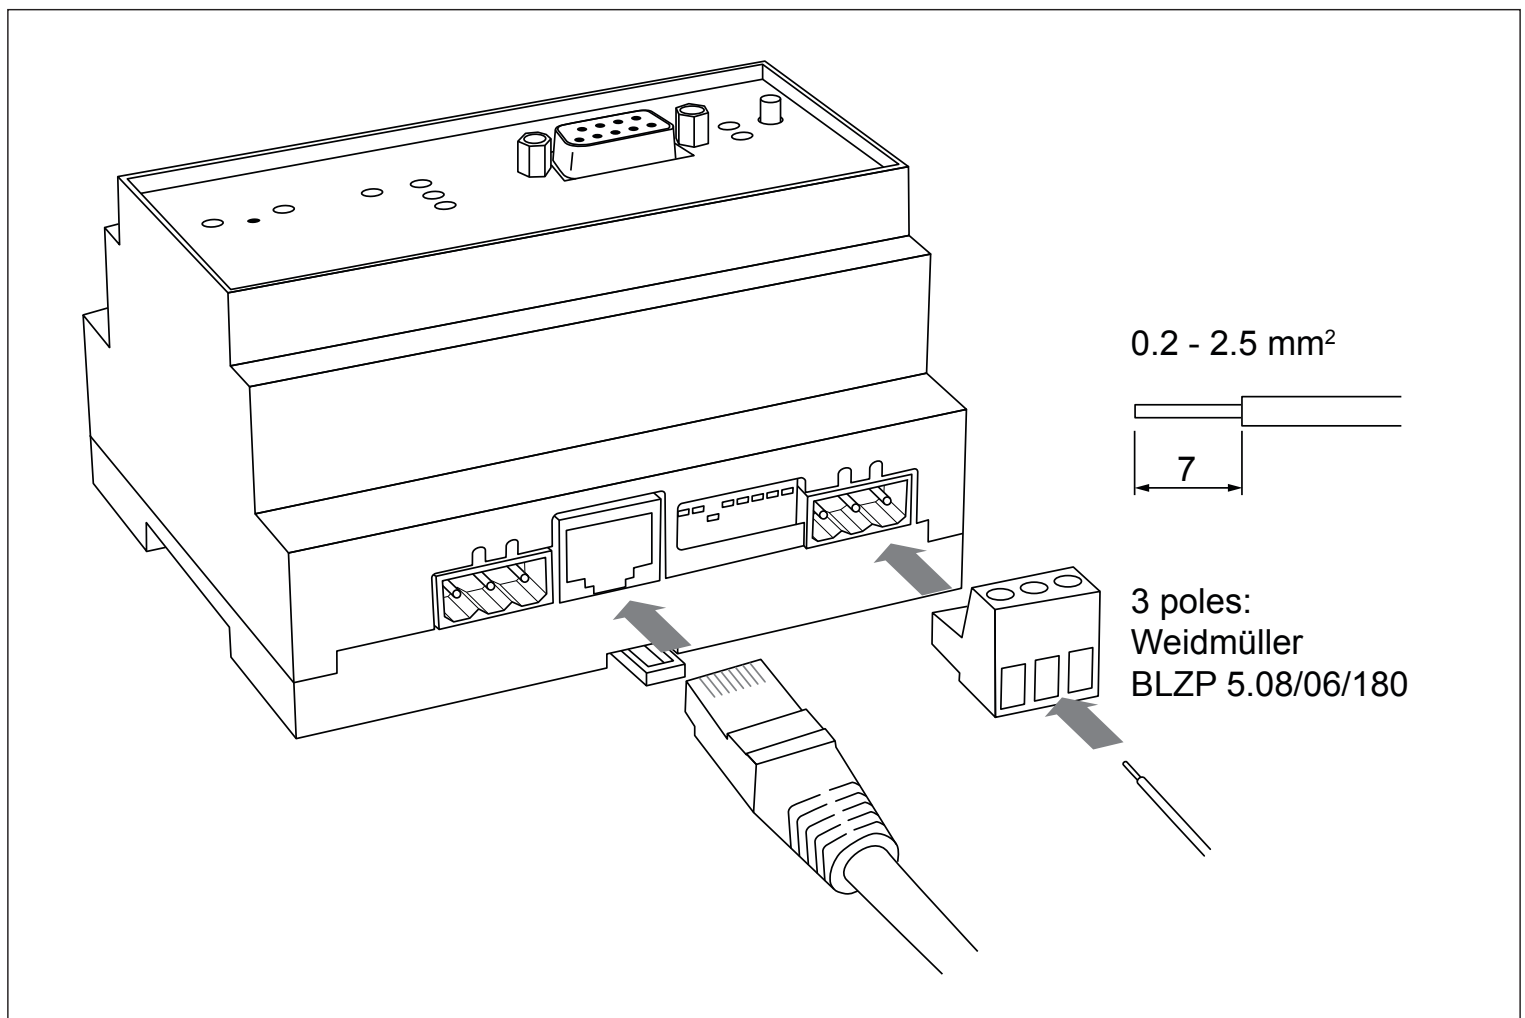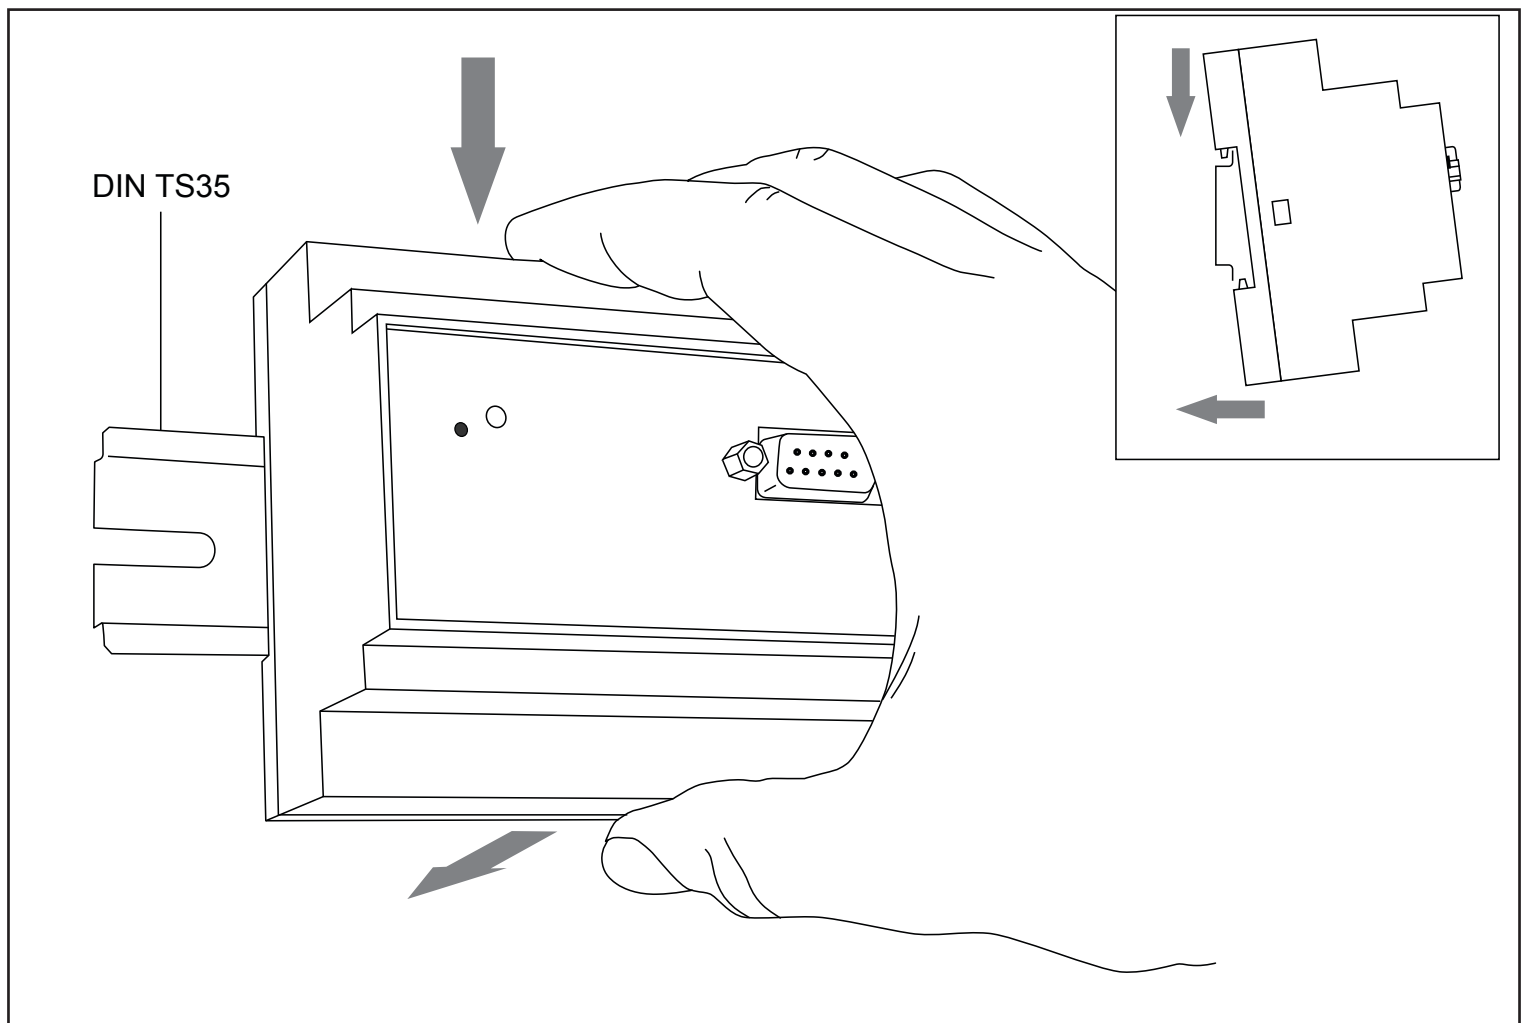


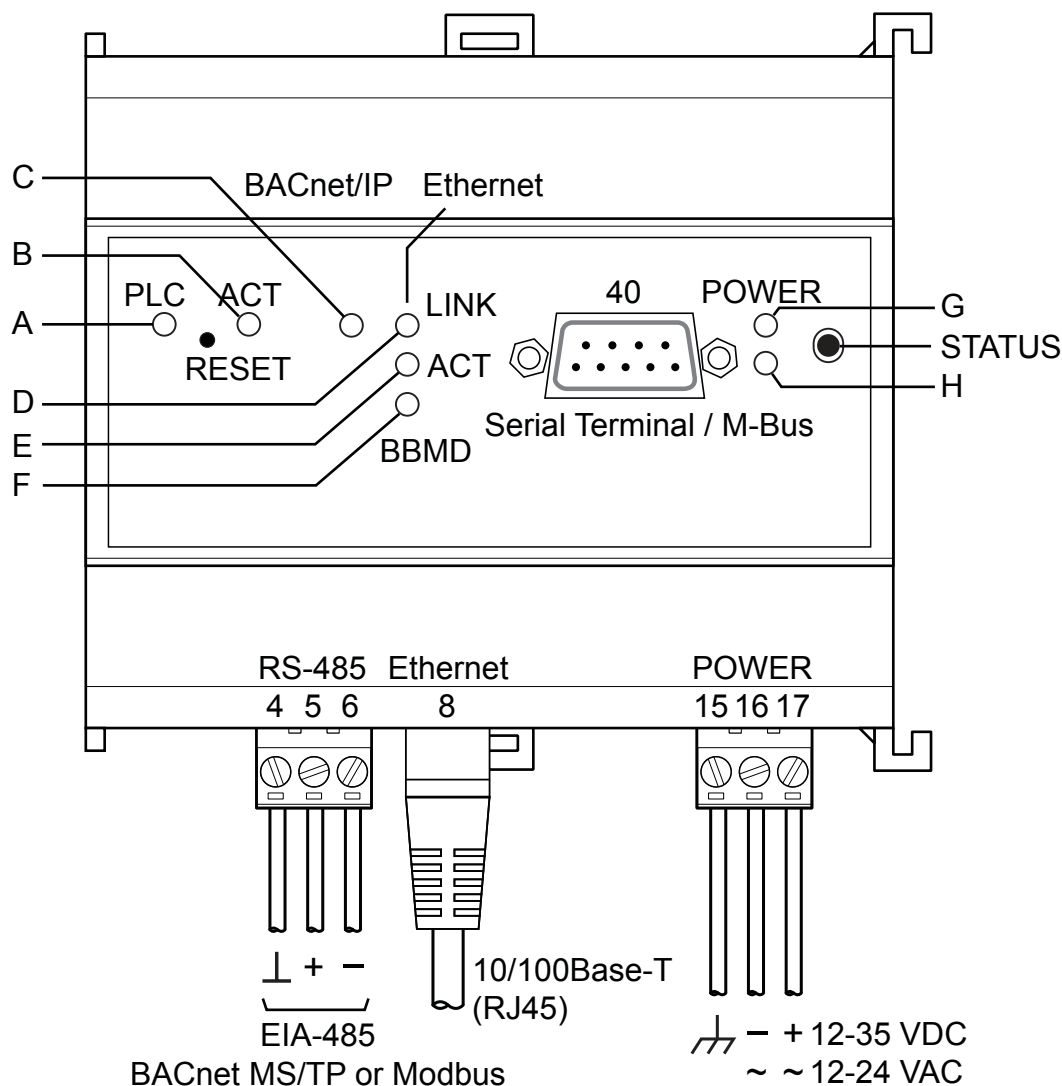


Connectors			Status LEDs		
EIA-485	4	Input GND	A	OFF	PLC not running
MS/TP	5	Input + (B) non-inverting input		Green flashing	PLC program running
Modbus	6	Input – (A) inverting input		Green	PLC program not running
Ethernet	8	10/100Base-T (RJ45)		Orange	I/O disabled
POWER	15	Power supply input EARTH GND		Red	CPU overload
	16	Power supply input MINUS Can be connected to EARTH GND	B	Green flashing	Traffic on BACnet MS/TP port
	17	Power supply input PLUS  Must NOT be connect to EARTH GND	C	Green flashing	Traffic on BACnet/IP port
SERIAL	40	EIA-232 (DB9 male) Terminal or M-Bus depending on DIP switch No. 7	D	Green	Ethernet link
			E	Green flashing	Ethernet traffic
			F	Green	LINX-210:OFF LINX-211:BBMD enabled
			G	Green	Power
			H	OFF	Normal operation

Buttons	
RESET	Reset
STATUS	Send “I AM” message

NOTE: If terminal 4 is not connected make a short between terminal 15 and 16,
and connect to EARTH GND.

Serial Port

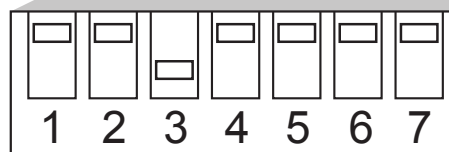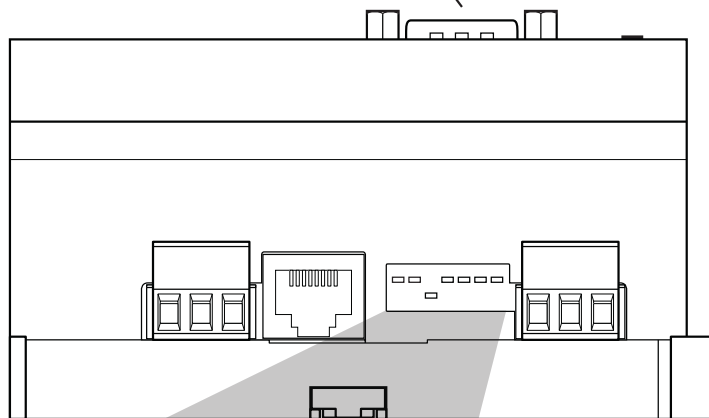

OFF
ON

Factory default, do not change!

1	2	3	4	5	6
OFF	OFF	ON	OFF	OFF	OFF

7	Serial Port
OFF	Terminal Mode
ON	M-Bus Mode

MAC address of Ethernet port

Serial number of the device

