08830 Sant Boi de Llobregat Electronic Intelligent Controls, S.L. Passatge Garrotxa, 6

Barcelona, Spain

Tel.: +34 93 652 55 21 Fax: +34 93 652 55 22 www.e-controls.es info@e-controls.es

Instructions sheet





AirQualy T + HR + CO2 + VOC

To, HR, CO2 and VOC sensor for building interiors

AirQualv is an indoor air quality sensor that is available in different models, which include a sensor or a combination of sensors between Temperature, Humidity, CO2, Volatile Organic Compounds (VOC) and Particulate Matters (PM). The equipment carries out continuous measurement of the sensor or sensors and displays its value through LED indicators or sends the value through its outputs or the communication bus

For its operation, the equipment requires a coupling unit called "e-Bus Coupling Surface" that must be purchased separately and which is available in 3 models; a stand-alone model, a model with a 0-10V / 4-20 mA output + a relay output and a model with Modbus communication.

The device is configured wirelessly via NFC with the EConfigurator APP, available for Android in the Google Play Store.

Through the ETools APP it is possible to visualize the value measured by each sensor of the equipment in a numerical way on the mobile phone.

Product description

The AirOugly T + HR + CO2 + VOC model includes 4 different sensors to measure temperature. humidity, CO2 with optical NDIR technology and Volatile Organic Compounds (VOC) presents in ethanol because of consmetics, paints and solvents, cleaning products and plastics that contribute to load the environment. The equipment is available in two finishes: a model with 4 columns of LED indicators to signal the measurement of each sensor. The CO2 and VOC measurements are displayed in two columns with 5 LED indicators each and the temperature and humidity measurements are displayed in two columns with 3 LED indicators each. There is a second model without LED indicators.

We recommend installing a sensor every 30 m2.

LED indicators to display the measured value

The measurements of the CO2 and VOC sensors are represented by 5 blue, green, vellow, orange and red LED indicators, which show the measured levels from best to worst air quality. Each LED is associated with a range of values and lights up when the measured value is within its range. The temperature and humidity measurements are represented by three LED indicators. If the measured value is within a predefined range, the green LED turns on, if it is above the range, the red LED turns on and if it is below the range, the blue LED turns on.

Through the E-Configurator APP (see configuration section) it is possible to modify the range of values associated with each LED indicator and sensor to adapt them to the needs of each installation

Viewing values through mobile phone

The measured value of each sensor can be viewed with a mobile phone via the NFC interface. To do this, you must download the ETools APP from the Play Store and install it on a mobile phone with an Android operating system.

Run the ETools APP and bring the phone closer to the equipment to view the values of each sensor

Customisation of the front tailored to each project

The product includes a removable label that comes pre-designed with explanatory icons. Through the e-Touch Creator website at www.e-controls.es, it is possible to define the custom label, being able to choose an icon or text for each LED indicator, as well as the desired colour. Once the design is finished, a form must be filled in and sent to E-Controls for printing, or the

Equipment setup

The equipment is configured through a mobile phone using the E-Controls EConfigurator APP and NFC proximity wireless data transfer technology. To do this, you must download the APP from the Play Store and install it on a mobile phone with Android operating system and download the project by placing the phone on top of the front until the device's antenna is detected. Once the phone has detected the equipment, download the project by pressing the data transfer icon in the APP. For more information, please refer to the operating manual of the EConfigurator APP.

In the model with Modbus coupling unit it is also possible configure the device via bus.

The configuration manual details all the parameters available on the equipment.

The device configuration can be done without powering the equipment, and even without removing it from the packaging box, thus greatly facilitating the configuration work.

APP download links

EConfigurator





Installing the product

IMPORTANT NOTE: Install the equipment at a height equal to or greater than 150 cm from the ground. The equipment can react more quickly depending on the speed of the air around the sensor. Avoid installing the equipment near an air outlet with a concentration of CO2 and dust. For a correct CO2 measurement, we recommend installing a sensor every 30 m2.

Product assembly process

- 1. Fix the e-Bus Coupling Surface rack to the wall. If the equipment requires external or bus power supply, connect the cables to the corresponding terminals (see e-Bus Coupling Surface Instruction Sheet).
- 2. Fix the frame to the rack by the teeth on the upper part and press lightly on the lower par until you hear a "click".
- 3. Insert the label in the upper slot on the front of the equipment, between the methacrylate and the circuit.
- 4. Attach the front centred on the frame.
- Power the equipment and wait 5 minutes to obtain a correct measurement.

- 1. Insert a small screwdriver into the window located at the bottom of the frame. Slightly pry ou with the screwdriver and remove the frame from the bottom.
- 2. Slightly move the frame upwards and completely remove the front and frame.

Precautions:

- Disconnect the device from the supply voltage before mounting or moving the equipment.
- Do not leave bare or wrapped cables around the equipment.
- Do not connect the device with wet hands
- Do not open or pierce the product.
- Keep the device and cables away from moisture and dust.
- Use the equipment in pollution-free environments and in atmospheric pressure environments within the permitted levels.
- · Avoid sudden blows on the equipment.
- Keep the ventilation windows of the equipment clean using a cloth or with pressurized air.
- Power the equipment with the recommended power supply and always with a very low voltage isolated power supply.

Installing the product Product assembly process:

Fix frame to wall Fix frame to coupling unit






Attach front to frame



Product disassembly:

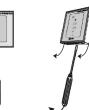

Technical specifications

Power supply

	Operating voltage	
	Maximum consumption	
	Temperature sensor	
_	Measurement range	
	Resolution	
	Typical precision between -10 and 60 °C	
	Loss of precision throughout its life	< 0.03°C / year
	Relative humidity sensor	
	Measurement range	
	Resolution	
	Typical precision between 0 and 80 °C	
	Loss of precision throughout its life	< 0.25% RH / year
	Sensor CO2	•
	Technology	. NDIR (Non-dispersive infrared technology)
	Measurement range	0 to 5000 ppm
	Resolution	
	Accuracy	+ (30 ppm + 3%)
_	Stability with temperature	+/- 2.5 ppm/°C between 0 and 50 °C
ne	Loss of precision throughout its life	
ne	Sampling time	
	Stable measurement value	
	Working pressure range	
	Maintenance	
	Shelf life	
	Volatile Organic Compounds sensor (VOC)	
JS	Measurement range	0 to 500 IAO (VOC index)
ce	Resolution	
	Precision	
rt		
ΙL	Quantity	16
	Range configuration	
te		
	Colours	Rive Green Yellow Orange Red
	Ranges Blue / Green / Yellow / Orange / Red 0 - 350	
	IAO sensor indicators	/ 331-300 /301-000 / 001-1200 / ×1200 ppiii
	Colours	Plus Cross Vollaus Orango Rad
	Ranges Blue / Green / Yellow / Orange / Red 0 - 50 / 51-100	
	Temperature sensor indicators	7 / 101-200 / 201-330 / 2330 IAQ (VOC IIIdex)
ut	t Colours	Plus Cross Red
	Colouis	

Humidity sensor indicators Colours Blue, Green, Red
Ranges Blue / Green / Red
Front design
Custom design through e-Touch Creator website
Wireless communication
Functionality For configuration and reading of values Technology NFC
Standard JSO/EIC 15693
Reading Speed Up to 53 Kbit/s
Data security
Mechanical characteristics
Dimensions (with frame)
Installation type
Weight
Front type Methacrylate
Colour
Environmental protection level (assembled)
Temperature
Operation
Storage
Humidity (non-condensing)
Operation
Storage
Product family standards Automatic electrical control devices for household and similar use EN 60730-1
CE conformity
Mark
Security
Standard EN 60730-1
IEC Protection
EMC
Emissions

Ordering numbers

AirQualy T+HR+CO2+VOC, Indoor Temperature + Humidity + CO2 + VOC Sensor, white finish	.Q.004100-000
AirQualy T+HR+CO2+VOC Leds, Indoor Temperature + Humidity + CO2 + VOC Sensor with LED indicators, white finish	Q.014100-000

Related items

e-Bus Coupling Surface SA, Stand-alone coupling unit for AirQualy mounting. 12-24Vdc power supply with external jack connector	C.400000-031
$\textbf{e-Bus Coupling Surface 20}, Coupling unit with relay output + 0-10 V/4-20 \text{mA analogue output for AirQualy mounting.} 12-24 \text{Vdc power supply.} \dots \dots \dots \dots \dots \dots \dots \dots \dots $	C.400201-031
e-Bus Coupling Surface Modbus, Coupling unit with Modbus RTU communication for AirQualy mounting. 12-24 Vdc power supply.	C.470002-031

The packaging of this product is considered an industrial container with the recipient being a

The manufacturer is not responsible for the incorrect use or installation of the product Read this document before installing the product. Document subject to changes without prior notice

