

AirQualy CO2

CO2 sensor for building interiors

AirQualy is an indoor air quality sensor that is available in different models, which include a sensor or a combination of sensors between Temperature, Humidity, CO2, Volatile Organic Compounds (VOC) and Particulate Matters (PM). The equipment carries out continuous measurement of the sensor or sensors and displays its value through LED indicators or sends the value through its outputs or the communication bus.

For its operation, the equipment requires a coupling unit called "e-Bus Coupling Surface" that must be purchased separately and which is available in 3 models: a stand-alone model, a model with a 0-10V / 4-20 mA output + a relay output and a model with Modbus communication.

The device is configured wirelessly via NFC with the EConfigurator APP, available for Android in the Google Play Store.

Through the ETools APP it is possible to visualize the value measured by each sensor of the equipment in a numerical way on the mobile phone.

Product description

The **AirQualy CO2** model includes a high precision sensor with optical NDIR technology to measure the CO2 concentration in an indoor space. The equipment is available in two finishes: one that includes 5 different coloured LED indicators on its front that allow the measured value to be viewed, and a second model without LED indicators.

For a correct CO2 measurement, we recommend installing a sensor every 30 m².

LED indicators to display the measured value

The equipment includes 5 blue, green, yellow, orange and red LED indicators to display the CO2 level, from best to worst air quality. Each LED is associated with a range of values and lights up when the measured value is within its range.

Through the E-Configurator APP (see configuration section) it is possible to modify the range of values associated with each LED indicator to adapt them to the needs of each installation.

Viewing values through mobile phone

The measured value of each sensor can be viewed with a mobile phone via the NFC interface. To do this, you must download the ETools APP from the Play Store and install it on a mobile phone with an Android operating system.

Run the ETools APP and bring the phone closer to the equipment to view the values of each sensor.

Customisation of the front tailored to each project

The product includes a removable label that comes pre-designed with explanatory icons. Through the e-Touch Creator website at www.e-controls.es, it is possible to define the custom label, being able to choose an icon or text for each LED indicator, as well as the desired colour.

Once the design is finished, a form must be filled in and sent to E-Controls for printing, or the designed image can be downloaded for printing on a conventional printer.

Equipment setup

The equipment is configured through a mobile phone using the E-Controls EConfigurator APP and NFC proximity wireless data transfer technology. To do this, you must download the APP from the Play Store and install it on a mobile phone with Android operating system and download the project by placing the phone on top of the front until the device's antenna is detected. Once the phone has detected the equipment, download the project by pressing the data transfer icon in the APP. For more information, please refer to the operating manual of the EConfigurator APP.

In the model with Modbus coupling unit it is also possible to configure the device via bus.

The configuration manual details all the parameters available on the equipment.

The device configuration can be done without powering the equipment, and even without removing it from the packaging box, thus greatly facilitating the configuration work.

Instructions sheet

EN



APP download links

EConfigurator



ETools



Installing the product

IMPORTANT NOTE: Install the equipment at a height equal to or greater than 150 cm from the ground. The equipment can react more quickly depending on the speed of the air around the sensor. Avoid installing the equipment near an air outlet with a concentration of CO2.

For a correct CO2 measurement, we recommend installing a sensor every 30 m².

Product assembly process

1. Fix the *e-Bus Coupling Surface* rack to the wall. If the equipment requires external or bus power supply, connect the cables to the corresponding terminals (see *e-Bus Coupling Surface Instruction Sheet*).
2. Fix the frame to the rack by the teeth on the upper part and press lightly on the lower part until you hear a "click".
3. Insert the label in the upper slot on the front of the equipment, between the methacrylate and the circuit.
4. Attach the front centred on the frame.
5. Power the equipment and wait 5 minutes to obtain a correct measurement.

Product disassembly


1. Insert a small screwdriver into the window located at the bottom of the frame. Slightly pry out with the screwdriver and remove the frame from the bottom.
2. Slightly move the frame upwards and completely remove the front and frame.

Precautions:

- Disconnect the device from the supply voltage before mounting or moving the equipment.
- Do not leave bare or wrapped cables around the equipment.
- Do not connect the device with wet hands.
- Do not open or pierce the product.
- Keep the device and cables away from moisture and dust.
- Use the equipment in pollution-free environments and in atmospheric pressure environments within the permitted levels.
- Avoid sudden blows on the equipment.
- Keep the ventilation windows of the equipment clean using a cloth or with pressurized air.
- Power the equipment with the recommended power supply and always with a very low voltage isolated power supply.

Installing the product

Product assembly process

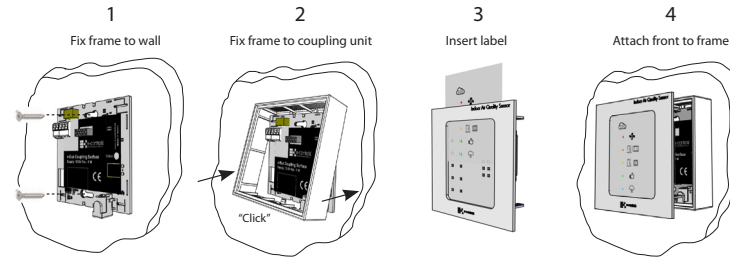

INS102150204010

Technical specifications

Power supply		Via e-Bus Coupling Surface	
Operating voltage	Maximum consumption 1 W
CO2 sensor		Technology NDIR (Non-dispersive infrared technology)
Measurement range 0 to 5000 ppm	Resolution 1 ppm
Accuracy ± (30 ppm + 3%)	Stability with temperature +/- 2.5 ppm/°C between 0 and 50 °C
Loss of precision throughout its life +/- 50 ppm	Sampling time 2 seconds
Stable measurement value 1 minute	Working pressure range 700 to 1200 mBar
Maintenance Not required (factory calibrated)	Shelf life 15 years
LED indicators		Quantity 5
Colours Blue, Green, Yellow, Orange, Red	Blue LED CO2 range 0 - 350 ppm
Green LED CO2 range 351 - 500 ppm	Yellow LED CO2 range 501 - 800 ppm
Orange LED CO2 range 801 - 1200 ppm	Red LED CO2 range > 1200 ppm
Range configuration Through EConfigurator APP		
Front design		Custom design through e-Touch Creator website	
Wireless communication		Functionality For configuration and reading of values
Technology NFC	Standard ISO/EIC 15693
Reading Speed Up to 53 Kbit/s	Data security 64-bit passwords

Mechanical characteristics

Dimensions (with frame) 86 x 86 x 22 mm
Installation type Surface
Weight 100 g
Front type Methacrylate
Colour White
Environmental protection level (assembled) IP20

Temperature

Operation -10°C to +50°C (14°F to 122°F)
Storage -10°C to +85°C (14°F to +185°F)

Humidity (non-condensing)

Operation 10% to 90% RH at 50 °C
Storage 95% RH at 50 °C

Product family standards

Automatic electrical control devices for household and similar use EN 60730-1
--	------------------

CE conformity

Mark CE
------	----------

Security

Standard EN 60730-1
IEC Protection Class III

EMC

Emissions EN 61000-6-3
Immunity EN 61000-6-1

Ordering numbers

AirQualy CO2 , Indoor CO2 Sensor, white finish AQ.001200-000
AirQualy CO2 Leds , Indoor CO2 Sensor, with LED indicators, white finish AQ.011200-000

Related items

e-Bus Coupling Surface SA , Stand-alone coupling unit for AirQualy mounting. 12-24 Vdc power supply with external jack connector BC.400000-031
e-Bus Coupling Surface 20 , Coupling unit with relay output + 0-10V/4-20 mA analogue output for AirQualy mounting. 12-24 Vdc power supply BC.400021-031
e-Bus Coupling Surface Modbus , Coupling unit with Modbus RTU communication for AirQualy mounting. 12-24 Vdc power supply BC.470002-031

The packaging of this product is considered an industrial container, with the recipient being a professional. The manufacturer is not responsible for the incorrect use or installation of the product. Read this document before installing the product. Document subject to changes without prior notice.

